



# DAEWOO

 
## Operation manual

## DWS-802

UHF 1/2 19" Dual Modular System



9001:2015

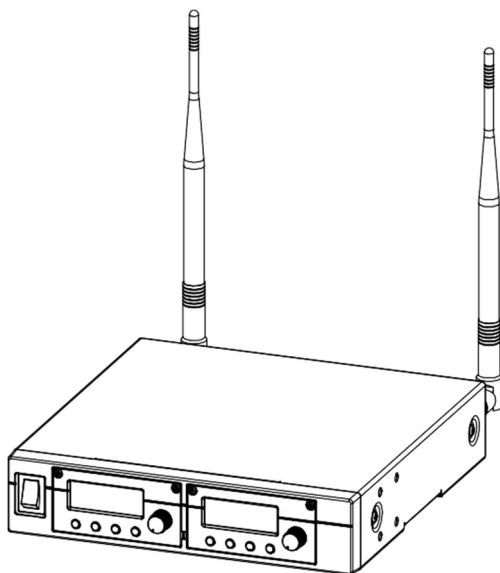

## DWS-802, UHF 1/2 19" Dual Modular System

 
Thank you purchasing this professional modular wireless system.

This versatile modular base can be used for RECEIVER; TRANSMITTER; MP3 RECORDER and BLUETOOTH modules.

Before operation, please read this manual thoroughly to familiarize with the function of each part and the flexibility of this versatile product.


### Parts and functions of DWS-802

Front

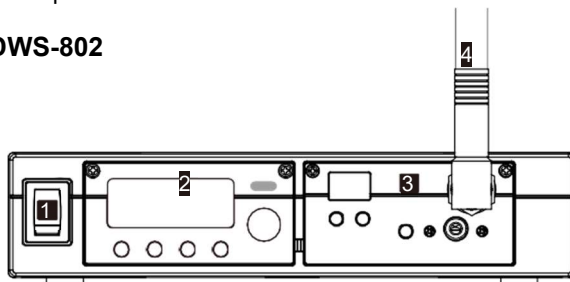

1. Power switch.
2. Channel A: **RECEIVER** module, also can be **MP3 RECORDER**, **BLUETOOTH** , or **REPEATER** module.
3. Channel B: **REPEATER** module, also can be **RECEIVER**, **MP3 RECORDER** or **BLUETOOTH** module.
4. **REPEATER** antenna.(optional)


 
Rear

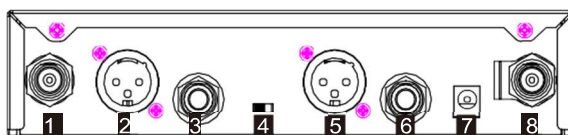

1. Antenna B
2. Balanced audio output (channel B) for **RECEIVER** module only.
3. Unbalanced audio output for **ANY** module  
Audio input for **REPEATER**, **MP3 RECORDER** or **BLUETOOTH** module (channel B)
4. Repeater ON/OFF. Switch ON when **REPEATER** module is to be used for audio signal transmission of the other module, which can be **RECEIVER**, **MP3 RECORDER** or **BLUETOOTH** module. Switch OFF if not in use.
5. Balanced audio output (channel A) for **RECEIVER** module only.
6. Unbalanced audio output for **ANY** module  
Audio input for **REPEATER**, **MP3 RECORDER** or **BLUETOOTH** module (channel A)
7. DC-input
8. Antenna A


## Audio output connection

  - **Balanced output:** XLR connector provides balanced audio output signal from this jack to the mixer/amplifier. Use an audio output cable with “XLR” or “Canon” connector, connect one end to the balanced output jack of the module, and the other end to the “MIC IN” jack of the mixer/ amplifier.
- **Unbalanced output:** 1/4" PHONE PLUG connector provides unbalanced audio output signal from this jack to the mixer/amplifier. Use an audio output cable with 1/4" PHONE PLUG connectors. Connect one end from the unbalanced output jack of the module, and the other end to the “LINE IN” jack of the mixer/ amplifier.
- **Audio output configuration**

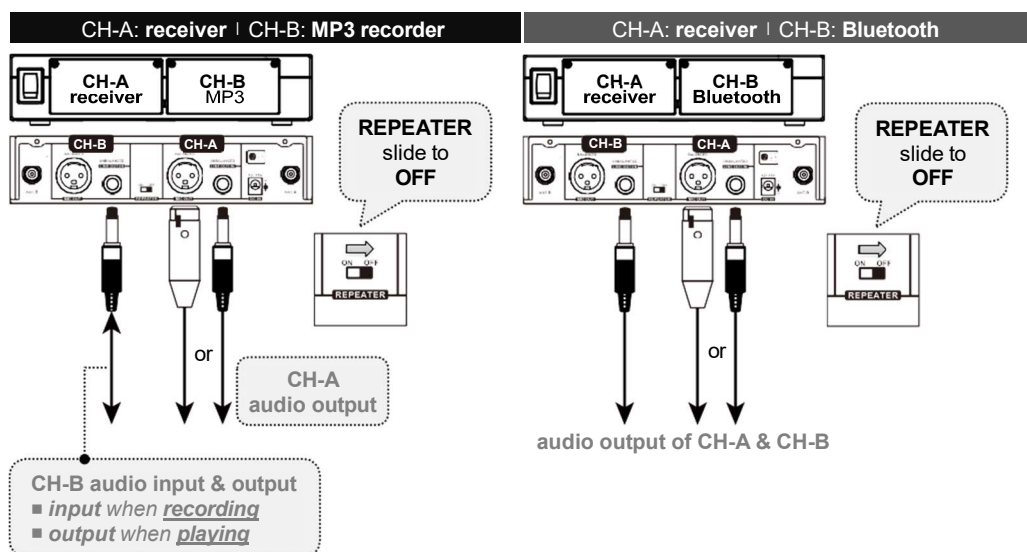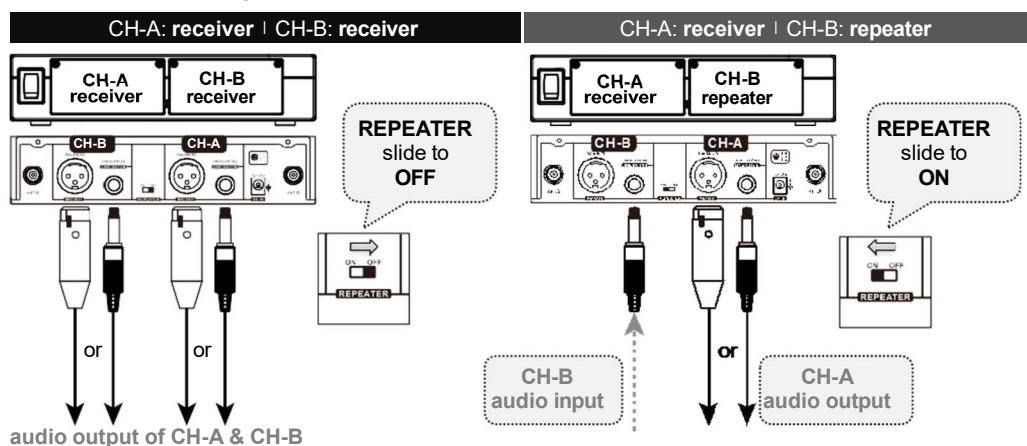


### Installation

 For best operation, this unit should be at least 1m above the ground and at least 1m away from a wall or metal surface to minimize reflection. The transmitter should also be at least 1m away from a wall or metal surface to minimize reflection. The transmitter should also be at least 1m away from the receiver.

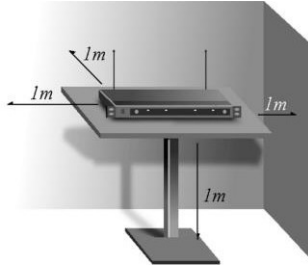

### Rack mounting

 DWS-802 has a half-19"-casing design. It can be cabinet-mounted with either 1 or 2 units. Individual kits for mounting 1 or 2 DWS-802 are available and please refer to the following assembly illustration.

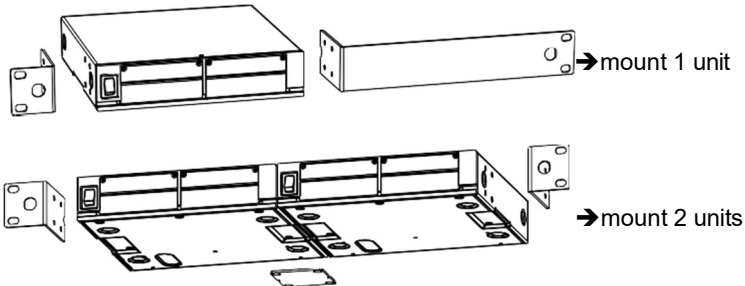

India Office: Unit 1203 A & B, 12th Floor, Tower A,  
Signature Tower, Sector 30, Gurugram,  
Haryana 122001 (INDIA)



715호, 스카й밸리, 416호 화곡로.  
서울시강서구-07548, 대한민국.